



FLAT OUT SULLAGE HOSE USAGE TIPS:


1. Remove outer plug, connect to van and walk away to unspool.

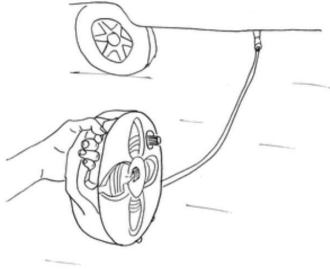


2. Connect your hose to camper/van with a downward outlet to maximise flow, as a horizontal outlet could create a fold in the hose as it drops to the ground

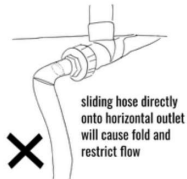

sliding hose directly onto horizontal outlet will cause fold and restrict flow

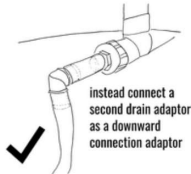


instead connect a second drain adaptor as a downward connection adaptor

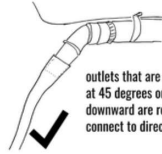

outlets that are already at 45 degrees or straight downward are ready to connect to directly

3. Run your hose to the drain in flowing curves rather than making tight corner bends, again this will assist flow

4. Your hose is cut into 2 lengths, use the shortest length required to meet the drain, or use the joiner provided to reach further if required

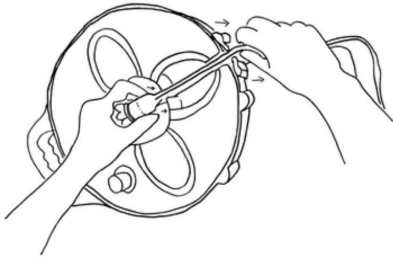

25MM SULLAGE HOSE: 6M ON COMPACT MULTI-REEL

INCLUDES



2 x 3m: 25mm Sullage Hose



1 x Barbed Joiner



1 x Compact Multi-Reel




1 x Drain Adaptor



2 x End Plugs

4. Wind the first length of hose walking along as you go, any excess water in the hose will be forced out naturally

5. At the junction, remove the joiner and slide about 1cm of the second hose inside the end of the hose you have already wound on

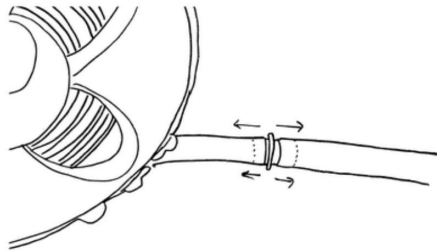

32MM SULLAGE HOSE: 9M ON MULTI-REEL

INCLUDES



1 x 3m: 32mm Sullage Hose



2 x End Plugs



1 x 6m: 32mm Sullage Hose



1 x Barbed Joiner



1 x Multi-Reel



1 x Drain Adaptor



6. Carefully do your next wind to ensure it does not lose grip

7. Keep winding until you reach the end

8. Remove drain adaptor and place the second end cap on protruding end of hose